



Motorcycle Terminal Layout

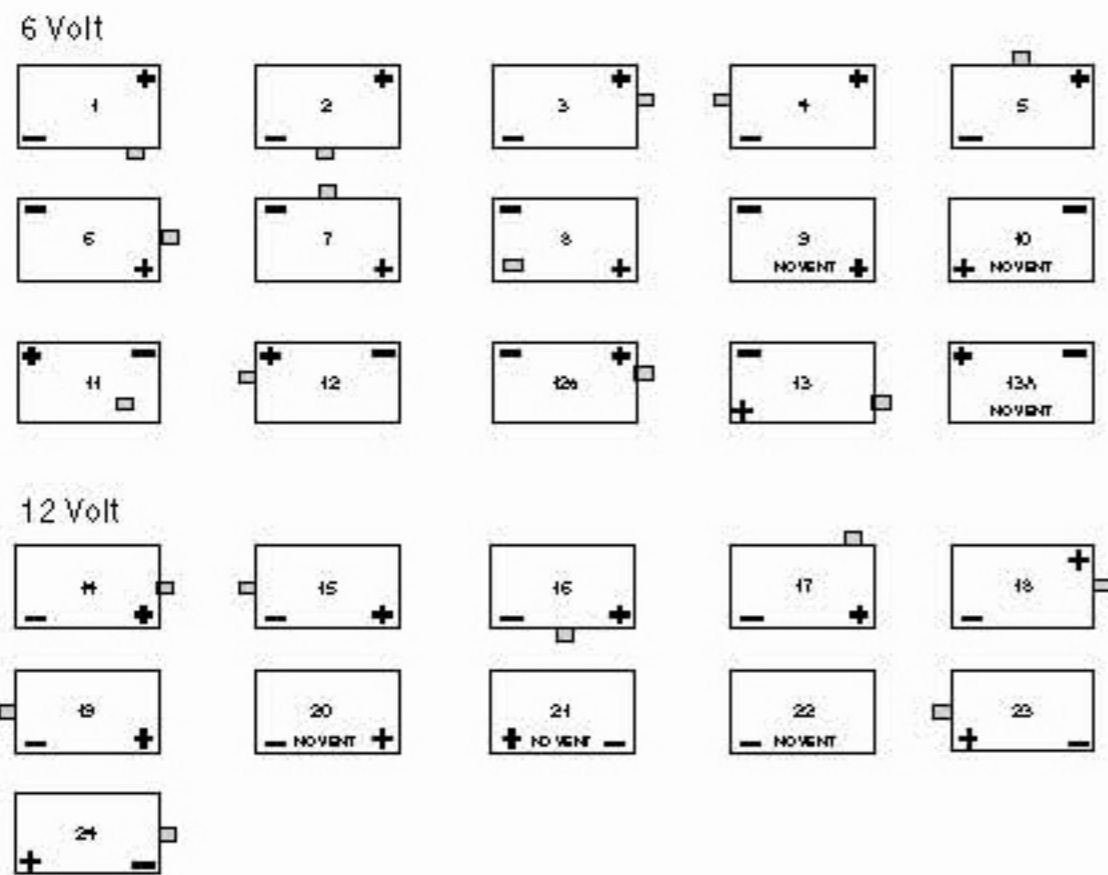


Connector Type Number	Connector Type
1	Ring Terminal
2	Male Bullet Connector
3	Female Bullet Connector
5	Four Way Connector Block
6	Ret Drilled Post
7	Box Post


VRLA Terminal Layout

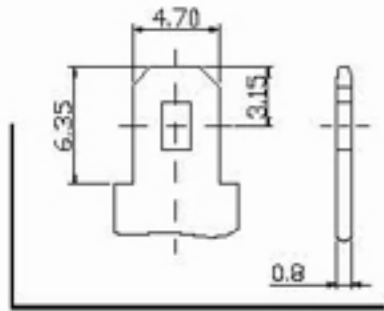


Terminal F1 (187)

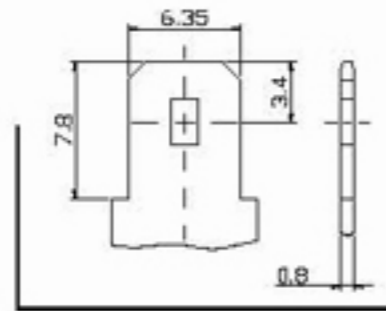


Terminal F2 (250)

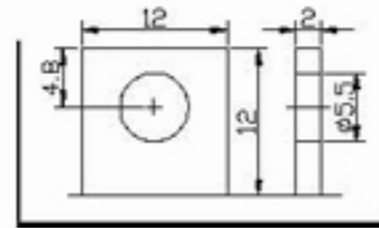

Terminal F3

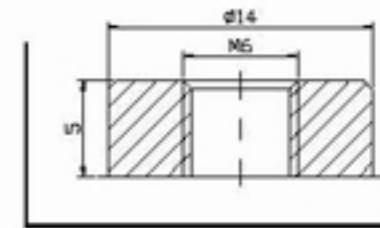


Terminal F11

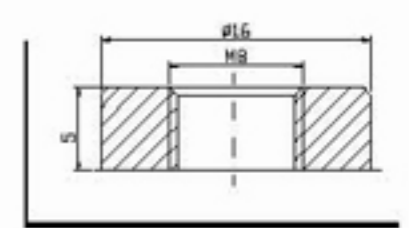


Terminal F12



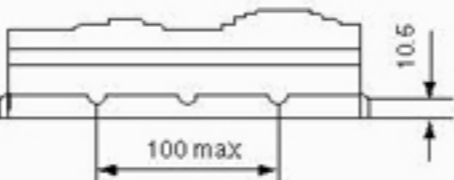

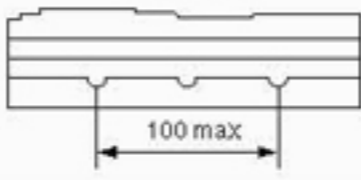

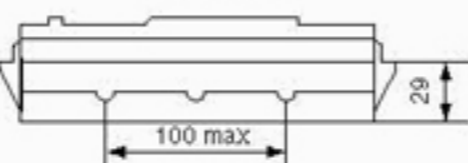
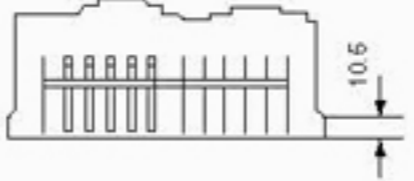


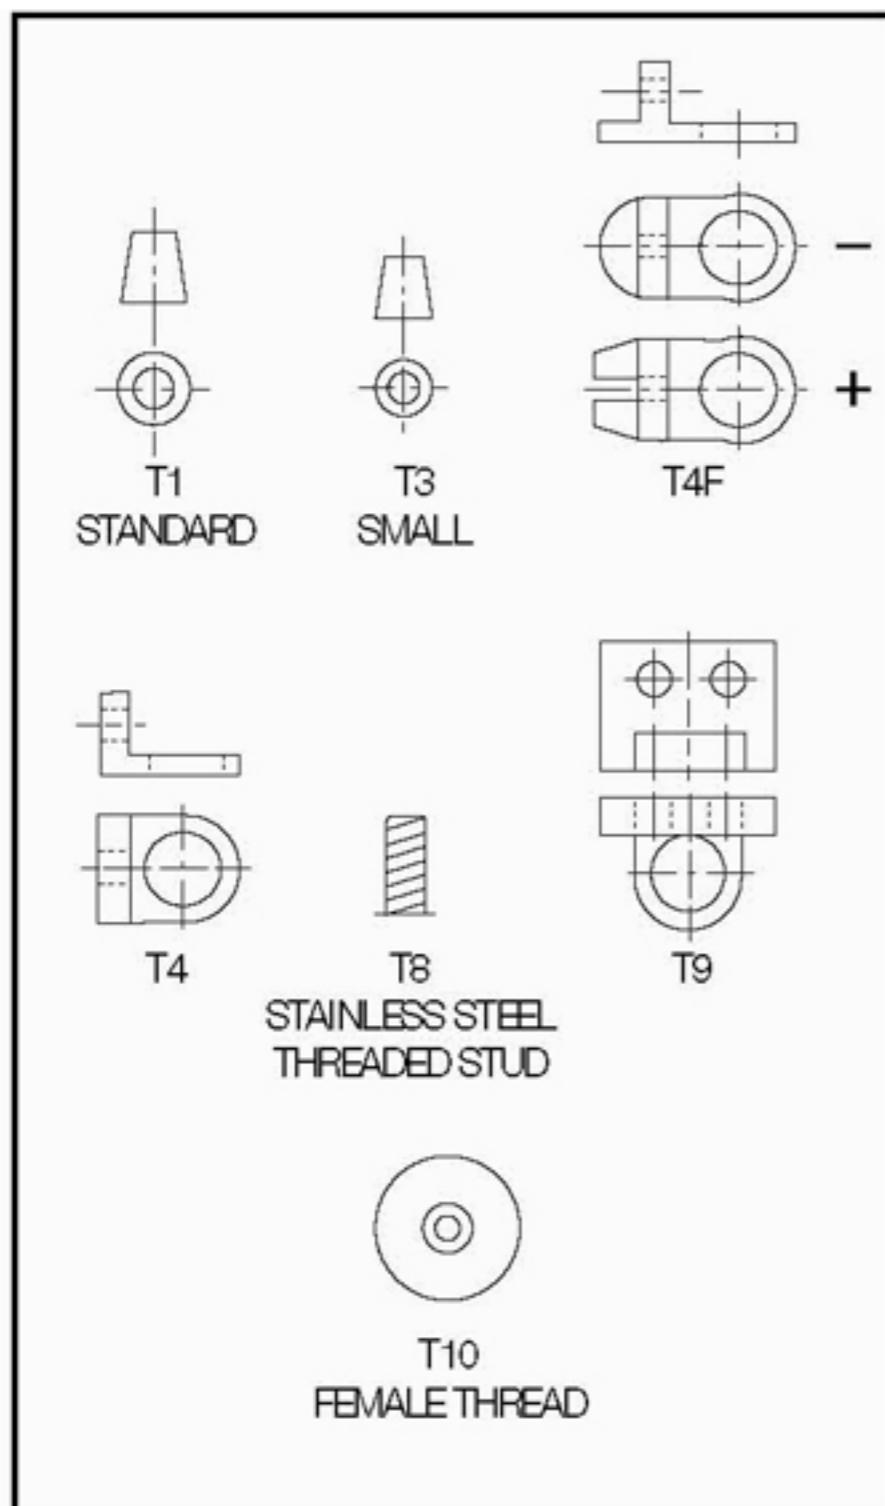

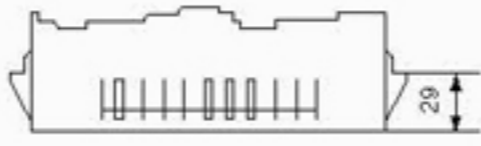

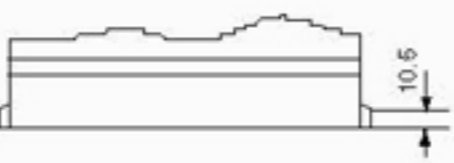
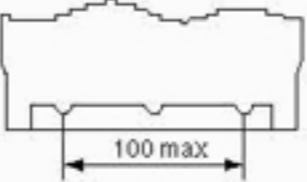
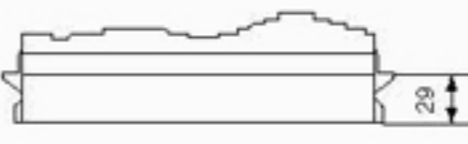
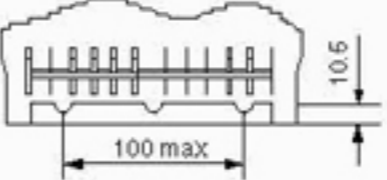
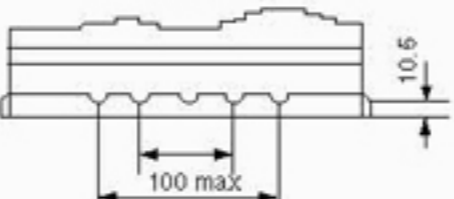

Type of Terminal

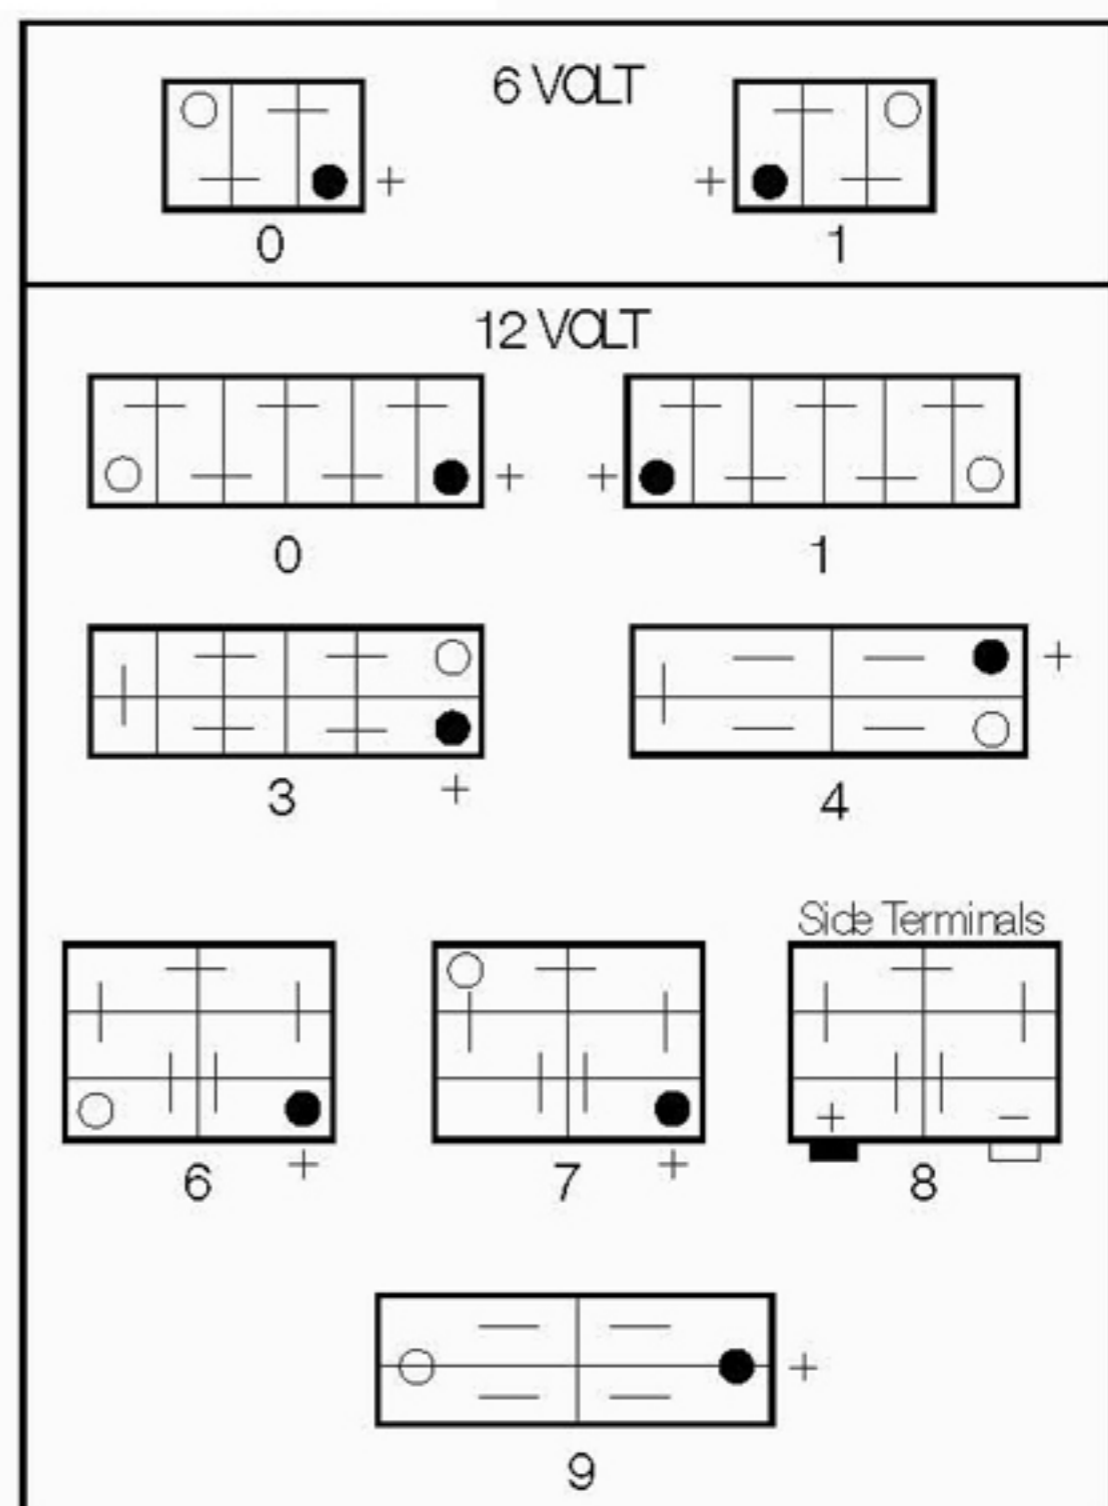

Terminal Layout

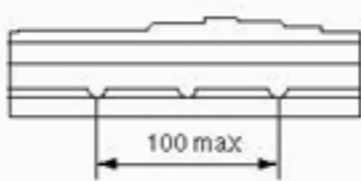

Automotive Holddowns

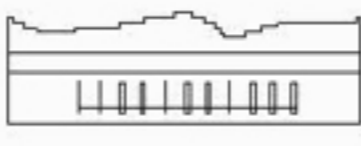CODE		
N	Without hold down	
B01	<p style="text-align: center;">3 notches</p> 	
B03	<p style="text-align: center;">3 notches</p> 	<p style="text-align: center;">3 notches</p> 
B04	<p style="text-align: center;">3 notches</p> 	
B05	<p style="text-align: center;">3 notches</p> 	
B06		
B07		
B09		
B11		<p style="text-align: center;">3 notches</p> 
B12		<p style="text-align: center;">3 notches</p> 
B13	<p style="text-align: center;">5 notches</p> 	<p style="text-align: center;">3 notches</p> 
B14	<p style="text-align: center;">5 notches</p> 